

QNN SAFE AUSTRALIA PTY LTD

ABN 47 168 078 233

Unit 9 / 376 Newbridge Road, Moorebank NSW 2170

Web site: www.qnnsafe.com.au


Email: info@qnnsafe.com.au

Phone: 02-87982669

QNN® Safe

USER'S MANUAL FOR CT-1340

Serial Number:

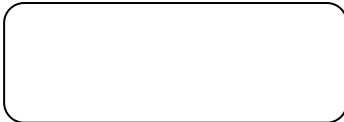

CT-1340

This package contents:

- User manual
- 1 External Battery Box
- 4 Bolt Down Screws
- 4 AA Batteries
- 2 Emergency backup Keys

Please contact your retailer or Qnn Safe Australia P/L if any shortage occurred

For the first time use, it needs the external battery power support

- Insert the supplied 4 AA batteries into the External Battery Box
- Connect the power to the front panel. The power inlet is located on the front Key Pad
- **After the safe is opened, please replace the batteries into the internal battery box, which is located behind the door plate**
- After enter the right code, Safe is now unlocked.

The factory setting for the digital code is: “1 2 3 4 5 6”

Opening instructions:

- Input 4-6 digits PERSONAL CODE, (Factory setting: 123456)
- “OPENED” displayed with 2 beeps, then the door automatically opened
- **E-CODE** Displayed with 3 beeps means it is a wrong code try. 3 continual wrong code tries will be held for 15 minutes.
- **After the Holding is activated, there is no way to de-activate the Holding within the 15 minutes period.** **HOLD **** then displayed to indicate the remaining holding time in minutes

QNN SAFE AUSTRALIA PTY LTD

ABN 47 168 078 233

Unit 9 / 376 Newbridge Road, Moorebank NSW 2170

Web site: www.qnnsafe.com.au

Email: info@qnnsafe.com.au

Phone: 02-87982669

Closing instructions:

Please know that the PERSONAL CODE used to lock the safe will be the same code for the next opening.

- Using **current** PERSONAL CODE: (**Within 10 minutes after unlock the safe**)
 - Push the door closed and press the ⊕ key
 - “CLOSED” displayed with 2 beeps, then the safe is locked
- Using a **new** PERSONAL CODE:

Please keep the door at open position during the whole processing until fully ensure that the code is changed correctly.


For security reasons, please change to your own code after the first opening. Your code can be set up from 4 to 6 digits

 - Push the door closed
 - Input 4-6 digits new PERSONAL CODE and then press the ⊕ key
 - “CLOSED” displayed with 2 beeps, then the safe is locked

Emergency Backup

In an emergency saturation, safe can be opened by the Emergency key. (Override the digital lock). To expose the key hole you need to screw off the little metal button the door front. Then turn the master key counter clockwise to unlock the safe.

You need to reset a new code after open the safe using **Emergency Key**

- Keep the Emergency key at counter clockwise position
- Input 4-6 digits new PERSONAL CODE
- Press the “⊕” key, “CLOSED” then displayed with 2 beeps and then 
displayed with 3 beeps twice, which is indicate that the new code is set successful
- Close and lock the door by removing the Emergency Key
- Using the New Code to unlock the safe, and remember the New Code.

Other features:

- **Code hidden function:**

To activate the function: Press “⊗” **twice**, then press “⊕”

To de-activate: Repeat the above steps

Cautions:

- **Do not store the Emergency Keys and the External Battery Box inside the safe**
- **When the “LO-BAY” display with 3 beeps, it means that the batteries need to be replaced. Please replace new batteries as soon as possible**